

User Manual

for TOB115 Outgoing Call Blocker

Thanks for purchasing LeCall TOB115 Outgoing Call Blocker/Toll Restrictor/Interceptor.

Part I: Applications

- ◆ Homes or institutions with mentally ill individuals
- ◆ Company with abusive staff
- ◆ Prevent to call to restricted phone numbers/prefixes
- ◆ Restrict to call to allow list phone numbers/prefixes only
- ◆ Intercept and redirect calls to pre-programmed number

Part II: Features:

- ◆ TOB115 can be programmed to block calls to 411, 311 or any other up to 8-digit long number. If the number is longer than 8 digits, you may block numbers with prefix.
- ◆ TOB115 can also block all outgoing numbers except the allow list numbers.
- ◆ TOB115 can intercept the restricted phone numbers that users dial and redirect the call to pre-programmed phone number(e.g. your mobile phone number).
- ◆ Telephone line powered, no need extra power supply or battery.
- ◆ Easy to install and program. Users can program it locally using a standard touch tone phone. Also, it can be programmed remotely.
- ◆ Compatible with any regular telephone lines, VoIP landlines, analog PABX/KSU extension lines. Compatible with corded landline phones, cordless phones.
- ◆ System password prevents others changing the programming. If you have changed the system password, please do remember it, or you could NOT reprogram it.
- ◆ The programming would retain even if the call blocker is disconnected from phone line.

Part III: Installation

Connect the LINE port to your phone line, link your telephone set to TEL1 or LINE2 port of the blocker.



Part IV: Programming

There are two programming modes, the commands are the same. Input the commands step by step. There would be one beep sound after a successful step, while double beep sound means fault command. If hearing double beep sound, you do not have to hang up, just repress the command.

1. Local program mode. Users can program the blocker by pressing the commands on the associated touch tone telephone keypad.
2. Remote program mode. Users can call the phone that connected to the blocker with another phone, answer the call, 15sec later, be silent, and then you can press the commands on the keypad of either phone to program. If you can not hear one beep sound after inputting *#1234, try again until you hear the beep sound and then continue with other commands.

Commands Table

| No. | Command | Description | Default value |
|-----|-----------------------------|--|---------------------------|
| 1 | *#1234 | To input the system password“1234” | 1234 |
| 2 | *** | To enter into the system | / |
| 3 | **9** | System reset | / |
| 4 | **3*abcd* | To set “abcd” as new system password | / |
| 5 | **3** | To delete the system password | / |
| 6 | *9*1**200* abcdefghij#** | To set the redirect object number“abcdefghij”. Object number can be up to 16-digit | / |
| 7 | **5**abc*acb d*efghi** | To set block number or prefix “abc”, “acbd”, “efghi”. If there are more than one number or prefix, use * to separate and ** as ending code. | / |
| 8 | **51*abc*acb d*efghi** | To set intercepted number or prefix “abc”, “acbd”, “efghi”. The number or prefix can be up to 8-digit | / |
| 9 | **50*abc*acb d*efghi** | To set allow list number or prefix “abc”, “acbd”, “efghi” | / |
| 10 | **4*xx* | To set the dialing speed. xx=##-15ms, xx=**-20ms, xx=00-25ms, xx=99-30ms, xx=88-35ms, xx=77-40ms, xx=66-45ms, xx=55-50ms, xx=44-55ms, xx=33-60ms, xx=22-65ms | default: **4*33*, 60ms |
| 11 | **81N* | Set the outgoing code if it is connected to a PABX extension line. N is the outgoing code | / |

Part V: Programming Example

Example 1.

Block users to call 411.

| | |
|------------|------------------------------|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| **5**411** | To block call to 411 |

Example 2.

Block users to call 411, 311, 2123861188. As the number 2123861188 is longer than 8 digits, we can block its prefix 21238611.

| | |
|-------------------------|--|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| **5**411*311*21238611** | To block calls to 411, 311, and 21238611 |

NOTE: The blocker treats all numbers as prefix in the commands. So all phone numbers with prefix 411, 311 and 21238611 will be blocked with the above setting, not only number 411, 311 and 21238611.

Example 3.

Block users to call 411, but allow them to call phone numbers with prefix 4412.

| | |
|-------------|--|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| **5**411** | To block call to 411 and phone numbers with prefix 411 |
| **50*4112** | To set phone numbers with prefix 4112 to allow list. |

Example 4.

Intercept the phone numbers with prefixes 411, 311 and redirect the call to 2123861188

| | |
|---------------------|---|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| *9*1**2123861188#** | To set the redirect object phone number |
| **51*411*311** | To intercept phone numbers with prefix 411, 311 that users dial |

Example 5.

Intercept the phone numbers with prefixes 411, 311 and redirect the call to 2123861188, and allow phone numbers with prefix 4112 go through directly.

| | |
|---------------------|---|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| *9*1**2123861188#** | To set the redirect object phone number |
| **51*411*311** | To intercept phone numbers with prefix 411, 311 that users dial |
| **50*4112** | To allow phone numbers with prefix 4112 go through directly |

Example 6.

Allow users to call phone numbers with prefix 212, 333 only, if users dial other number, it will be redirect to an object phone number(e.g. your mobile phone number).

| | |
|------------------------|---|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| *9*1**object number#** | To set the redirect object phone number |
| **51*#** | To intercept all phone numbers that users dial |
| **50*212*333** | To allow phone numbers with prefix 212, 333 go through directly |

Example 7.

If the call blocker is connected to an extension line of a PABX, and users need to "0" firstly to make a outgoing call. Intercept the phone numbers with prefixes 411, 311 and redirect the call to 2123861188.

| | |
|---------------------|---|
| *#1234 | To input the system password |
| *** | To enter into the system |
| **9** | System reset |
| *9*1**2123861188#** | To set the redirect object phone number |
| **51*411*311** | To intercept phone numbers with prefix 411, 311 that users dial |
| **810* | To set the outgoing code |

Packing List:

TOB115 outgoing call blocker×1;
1 meter RJ11 cable×1;
User manual×1

Quality Warranty: Two years.

Technical Support:

Email: support@lecall.net
Phone: +86-18929347000
Skype: +86-18929347000
Wechat: +8618929347000